Item #**********
Model #ES4679OB4

USE AND CARE GUIDE
PENDANT FIXTURE

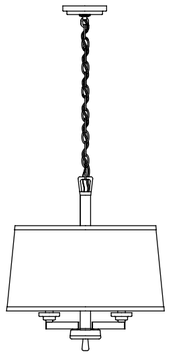

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this pendant fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Warranty

5-YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of five year(s) from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace, or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation, and specifically excludes liability for direct, incidental, or consequential damages. Some states do not allow exclusions or limitations on an implied warranty, so the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.

Questions, problems, missing parts? Before returning to store,
call Commerial Electric Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS (Save These Instructions)

- ☐ Read all instructions prior to beginning the installation process.
- ☐ Make sure the power is turned off at the electrical panel box before beginning your installation. Turning the power off at the wall switch is not sufficient to prevent electrical shock.
- ☐ This fixture is intended to be mounted to a 4 in. square x 2-1/8 in. deep metal octagon outlet box. The box must be directly supported by the building structure.
- ☐ All electrical connections must be in accordance with local codes and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.

WARNING: Do not install this lighting system in a wet location.

CAUTION: Turn off/unplug the light and allow it to cool before replacing the bulb.

CAUTION: Keep the lamp away from materials that may burn.

Care and Cleaning

CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture or components, as damage may occur.

- ☐ To clean the fixture, first disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☐ Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the interior and exterior surfaces of the xture.
- ☐ Allow the fixture to dry completely before power is restored.

Pre-Installation

PACKAGE CONTENTS

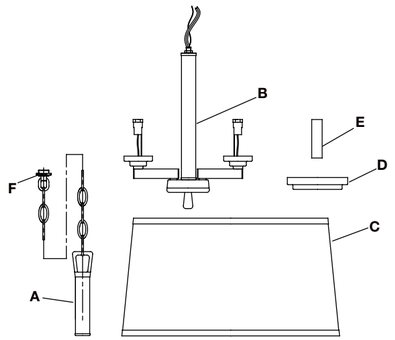

Part	Description	Quantity
A	Chain assembly	1
B	Fixture body	1
C	Fabric shade	1
D	Canopy	1
E	Candle tube	3
F	Ring [preassembled on the chain assembly (A)]	1

Pre-Installation

TOOLS REQUIRED



Ladder Gloves Safety goggles Phillips screwdriver Electrical tape Wirestripper

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

AA
Outlet box screws
x 2

BB
Wire connectors
x 3

CC
Mounting bracket assembly
x 1

Installation

1 Installing the candle tubes and the bulb

- ☐ Place the candle tubes (E) onto the sockets of the fixture body (B).
- ☐ Install the light bulbs (sold separately).

CAUTION: Refer to the re-lamping label located on the fixture. Do not exceed the recommended wattage.

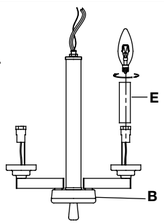

Installation

5 Making the electrical connections

- ☐ Attach the ground wire from the outlet box to the ground screw on the mounting bracket (CC), which is green and marked "GND".
- ☐ Connect the negative wires (raised ribs without writing) from the fixture to the negative wires from the supply circuit, the positive wires (smooth with writing) from the fixture to the positive wires from the supply circuit, and the ground wire (bare) from the fixture to the ground wire from the supply circuit using the wire connectors (BB).
- ☐ Wrap electrical tape (not included) around the wire connectors (BB), and ensure they are secure.
- ☐ Push all excess wire and wire connections back into the outlet box.

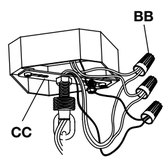

6 Installing the canopy

- ☐ Raise the canopy (D) up to the outlet box.
- ☐ Slide the canopy (D) over the loop of the chain assembly (A), and secure it to the ceiling using the ring (F).
- ☐ Adjust the length of the mounting bracket assembly (CC) stud and hex nut if necessary.

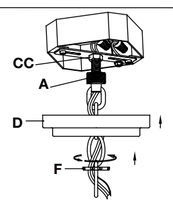

Installation

2 Installing the fabric shade

- ☐ Place the fabric shade (C) onto the straight tube of the fixture body (B).
- ☐ Weave the fixture wires through the fabric shade (C) and the chain assembly (A), up to the links and ring (F).
- ☐ Screw the chain assembly (A) and the straight tube of the fixture body (B) together to secure the fabric shade (C) in place.

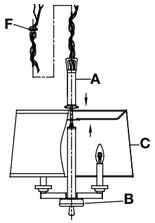

3 Installing the chain assembly

- ☐ Remove the ring (F) from the loop of the chain assembly (A).
- ☐ Adjust the chain to the desired length by removing links if necessary.
- ☐ Thread the chain assembly (A) through the canopy (D) and leave the ring (F) under the canopy (D).
- ☐ Thread the fixture wires up through the tube of the mounting bracket assembly (CC).
- ☐ Secure the mounting bracket assembly (CC) into the chain assembly (A).

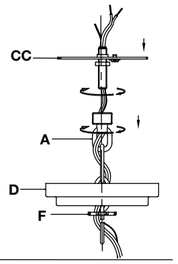

4 Installing the mounting bracket assembly

- ☐ Make sure the power is off.
- ☐ Pull the supply wires down out of the outlet box.
- ☐ Attach the mounting bracket assembly (CC) to the existing outlet box with the outlet box screws (AA) provided.

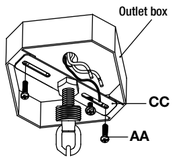

Troubleshooting

Problem	Possible Cause	Solution
The light bulb will not illuminate.	The light bulb is burned out.	Replace the light bulb.
	The power is off.	Make sure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light bulb is illuminated.	There are crossed wires, or the power wire is not properly grounded.	Check the wire connections.